



Tt[®] **eSPORTS**
By Thermaltake

VENTUS

GUI SOFTWARE GUIDE

A CONTENTS

PAGE	01	Main Interface		
		● Main	-----	01
		● Profiles	-----	02
		● Link to Program	-----	03
		● Normal Mode / Battle Mode	-----	04
		● Key Assignment	-----	05
PAGE	17	Macro Setting		
		● Macro Setting Interface	-----	17
		● Macro Manager	-----	18
		● Macro Record Setting	-----	19
		● Macro Record Timeline	-----	20
		● Insert Function	-----	22
PAGE	23	Performance Setting		
		● Performance Interface	-----	23
		● DPI	-----	24
		● Polling Rate	-----	25
		● Lift-off Control	-----	26
PAGE	27	Light Setting		
		● Light Option Interface	-----	27
PAGE	28	Firmware Update		
		● How to Update Firmware	-----	28

| CONTENT ONE Main Interface



Reset / Register / Guide / Close

Reset : Reset all setting

Register : Register as Tt eSPORTS's follower and receive updates from Tt eSPORTS via E-mail.

Guide : Configuration software manual

Close : Close Tt eSPORTS VENTUS GUI Software

Page : 04

Switch Normal/Battle Mode

The light frame indicates the Mode (Normal/Battle) you have selected

Page : 05

Key Assignment

Assign function to each button

Apply / Cancel / OK

Apply: Click Apply after completing profile setting and it will import setting into VENTUS

Cancel: Click Cancel if you wish to cancel the setting

OK: Click OK after setting has been completed



Page : 02

Profile

VENTUS has 5 profiles setting . Now you can turn on or turn off profile on your command.

Profile / Macro Manager

Profile Manager: Page : 02

Naming / Changing Profile and add / delete / duplicate / import / export profile.

Macro Manager: Page : 17

Performance / Light / Link to Program

Performance : Page : 23

Adjust VENTUS's DPI / Polling Rate / Lift-off

Light Option : Page : 27

Change VENTUS light

Link to Program: Page : 03

Set a program and VENTUS will turn on Profile automatically if you launch the particular program



Tt eSPORTS 2015 New GUI

Tt eSPORTS unveils the new GUI Software in 2014. Many feedbacks from gamers received and we noted all suggestions and experiences from gamers. In 2015, Tt eSPORTS launches an enhanced version of GUI. The software has been improved, user-friendly for everyone and can disable profile if you don't need it. Turn on / off Profile is one of Tt eSPORTS's new GUI feature and this allow gamers to switch profile quickly with just one click!

We believe **Less is More.**



Switch to Profile


Choose the Profile you wanted to change to

Turn On or Turn Off Profile

Click the BLUE BOX to enable/disable:

Turn On - Light Blue Box

Turn Off - Grey Blue Box

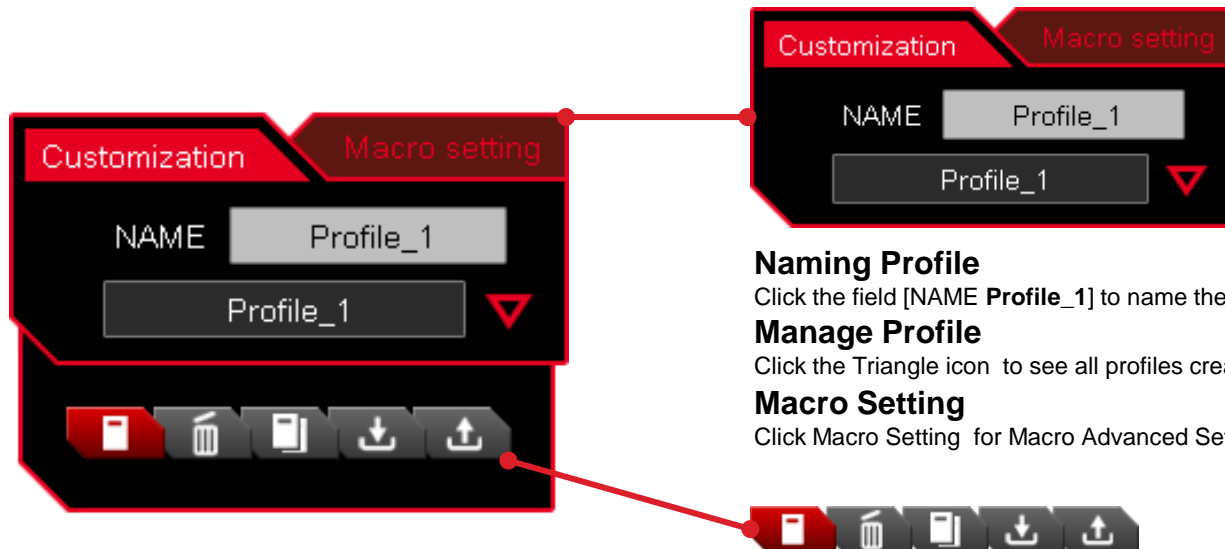

Naming Profile

Click the field [NAME Profile_1] to name the profile

Manage Profile

Click the Triangle icon to see all profiles created

Macro Setting

Click Macro Setting for Macro Advanced Settings

Create / Delete / Duplicate / Import / Export Profile

Sync Profile with Game

Do you ever feel frustrated or forget to switch profile manually while you were in game? Now, with Tt eSPORTS 2015 new GUI, profile can be automatically switched once you launches a game or a program. No more frustration and no more fail to remember. Auto Sync Profile with Game now!



Link to Program

Turn On or Turn

Turn ON - RED : Automatically turn ON with the pre-set program when it is enabled (A program has to be assigned beforehand)

Turn OFF – GREY : Will not turn ON with the pre-set program when it is disabled (A program has to be assigned beforehand)

Assign Program (Profile will enabled automatically once the program has been launched)

Click the [LINK TO PROGRAM] button and system will pop out a file browser for you to choose which program you want to assign.





Light Effect into Game

Tt eSPORTS develop a fancy light effect. Just switch the mode and you can experience a different sensation in your place. When you are in Battle Mode, higher A.P.M (Action Per Minute) will have a higher frequency flashes, while in lower A.P.M, the flash frequency decreases. This make VENTUS a gaming weapon that will enhance your gaming experience!



Normal Mode

In Normal Mode


Scroll Wheel lights up.
Tt Dragon light with Pulse-break lighting effect.
Two lights can turn on or off independently.

Battle Mode

In Battle Mode light flash frequency depend on current A.P.M

Scroll Wheel with Pulse-break lighting effect.
Tt Dragon light with Pulse-break lighting effect.

Once mode switched to Battle Mode, reminder as below will pop up:

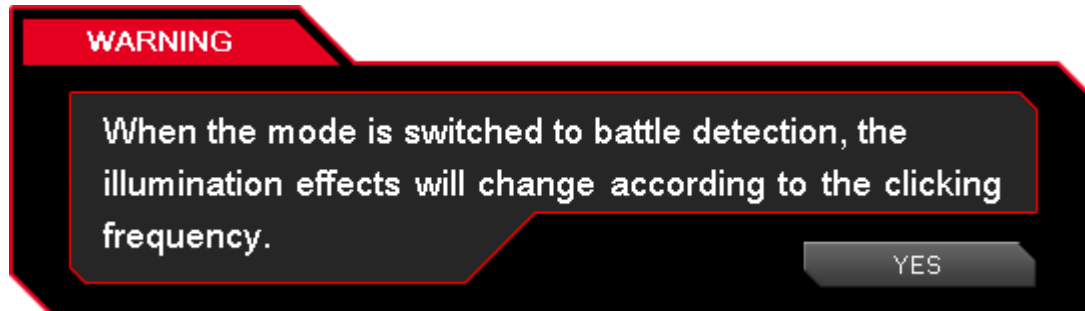

Customization for each VENTUS's button


Each VENTUS's button can be customized as your preferred, even the Scroll Wheel's function can be changed!
Customize it and make the VENTUS your very own ultimate weapon to conquer!

VENTUS Can Do More than You Expect!

Buttons Configuration

Click on each button to change its function (See right picture) ●
Click each button to assign functions.

Key Assignment

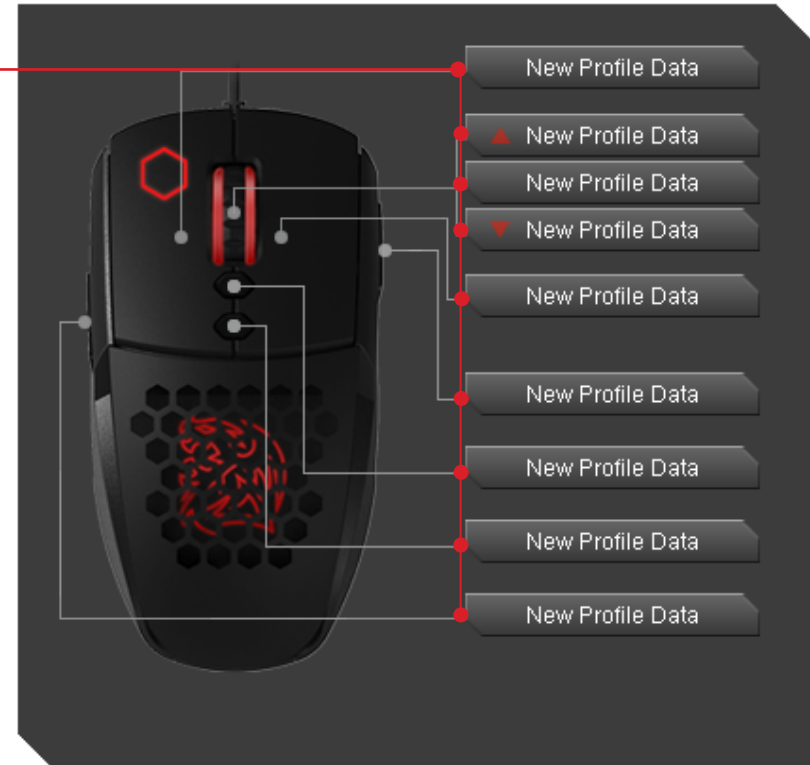

6 Key Functions to be Assigned!


Each of buttons of VENTUS can be assigned by six function (Default / Macro(T Key) / Single Key / Sensitivity / Launch Program / Disable).



- Default :** All buttons function will be set as default setting. (i.g : Left button as the Click action)
- Macro(T Key) :** Assign macro that has been recorded from Macro Manager.
- Single Key :** Set be mouse click function or keyboard per key signal.
- Sensitivity :** Change DPI function there are 5 mode can be selected.
- Launch Program :** Launch the pre-set program directly
- Disable :** Disable button (No signal no function)

Default

VENTUS has its own pre-configured functions, which is the default. If you wanted to change back to the default setting, you can just choose Default and it will be changed back to the pre-configured functions.

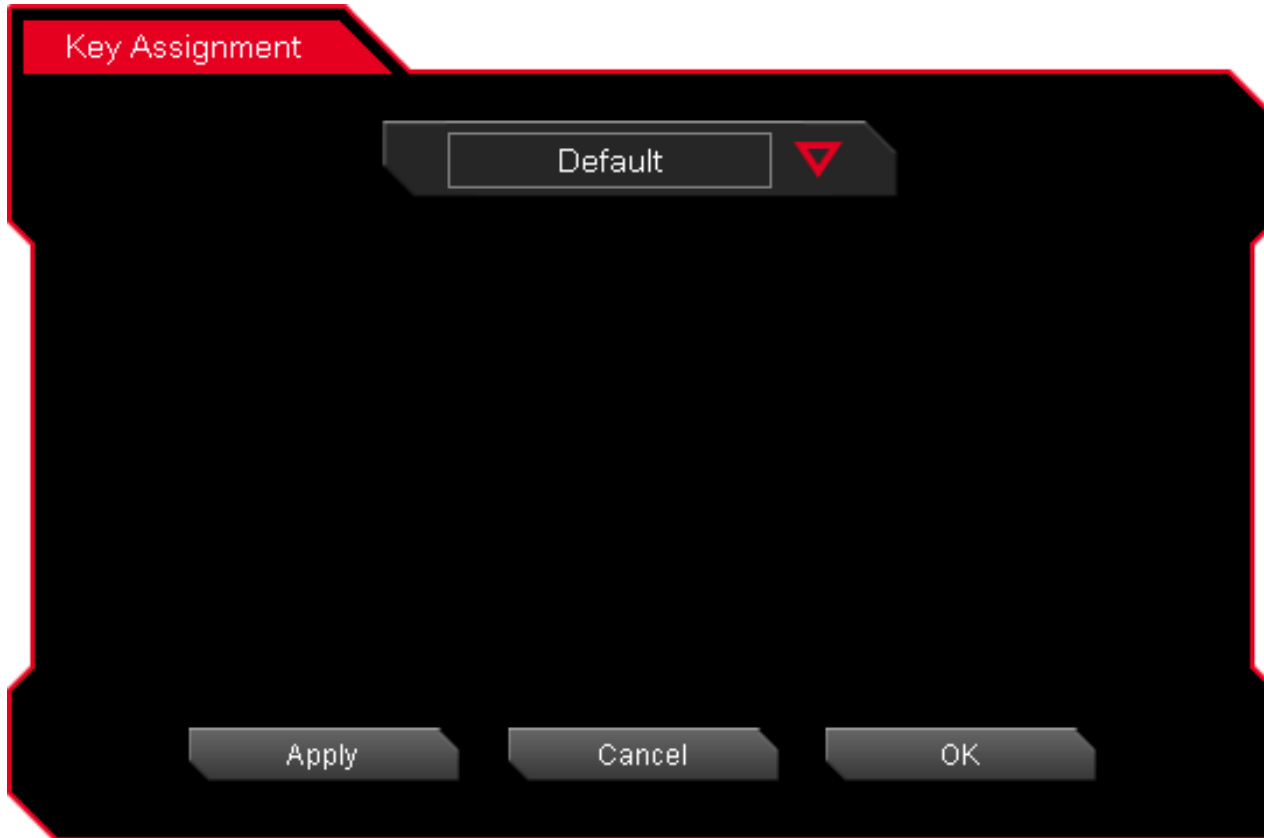

Macro (T Key)

T Key is the Macro key that you programmed.



Assign macro

Select a programmed macro that already recorded from Macro Manager ([Macro record detail, see Page 17](#))

Repeat

Customize the times that you want to have the macro repeats..



Once :

Multiple Times :

When press & hold :


Until press next time :

Macro will repeat once.

Macro will repeat depends on the repeat count set.


Macro will keep repeating while pressing and holding.

Macro will start repeating when you click and stop unless you click again

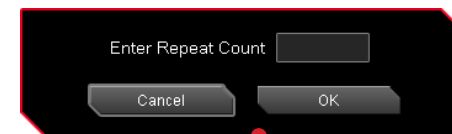

Single Key

Set only one key per button (function can be chose from mouse or keyboard function)

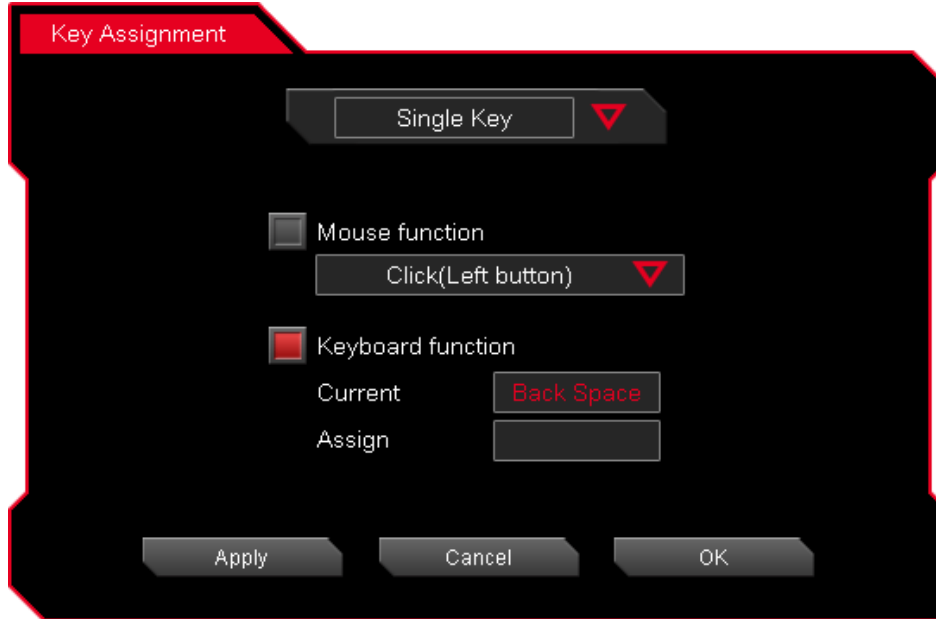


Mouse function

Mouse Function include left picture. ●


Keyboard function

You can type any keyboard signal into mouse button.
(i.g : If you set "Space" as one of the button, when you click on the button, it will act as "Space")

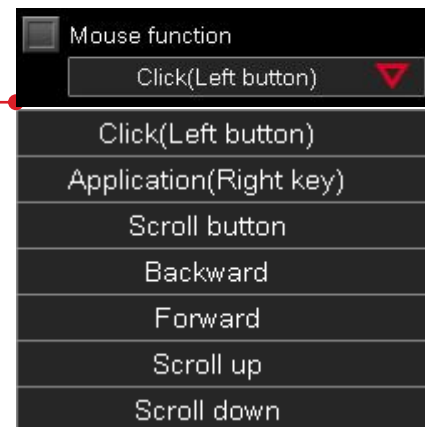

Sensitivity

Adjust DPI sensitivity, there are 5 different modes to change DPI.

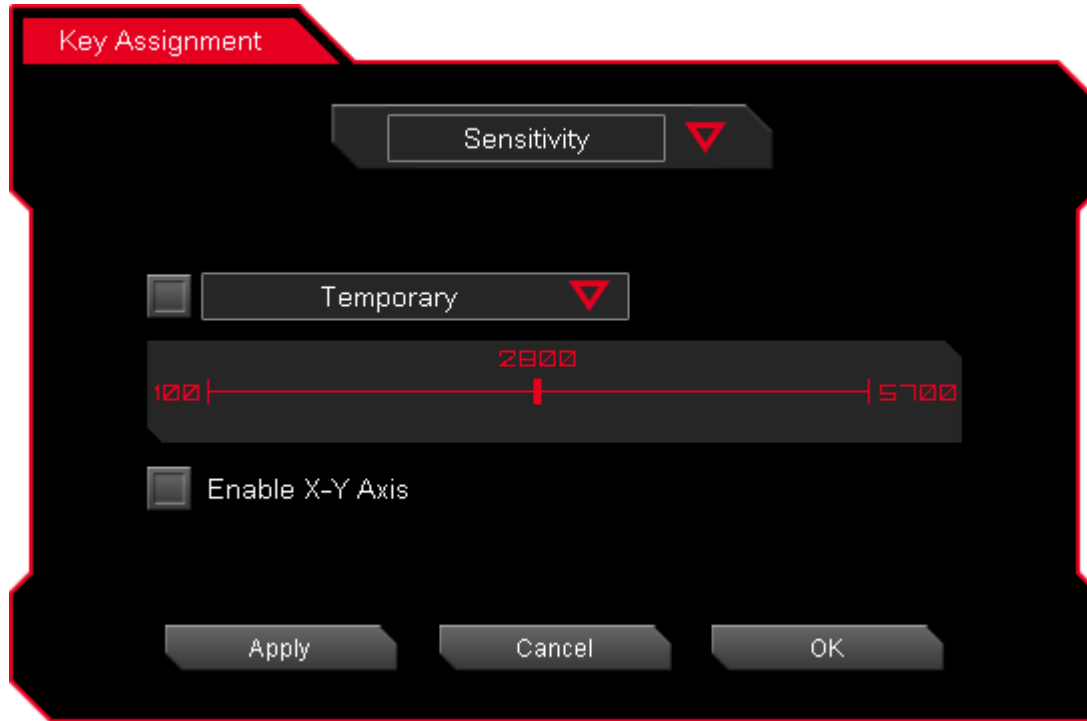


Five different Mode to change DPI as below

- Temporary
- Level up
- Level down
- On the fly
- Rotate

Sensitivity - Temporary Mode

Once DPI level has been set, pre-set DPI will start when you HOLD the button, pre-set DPI will stop and back to the original DPI once you RELEASE the button.

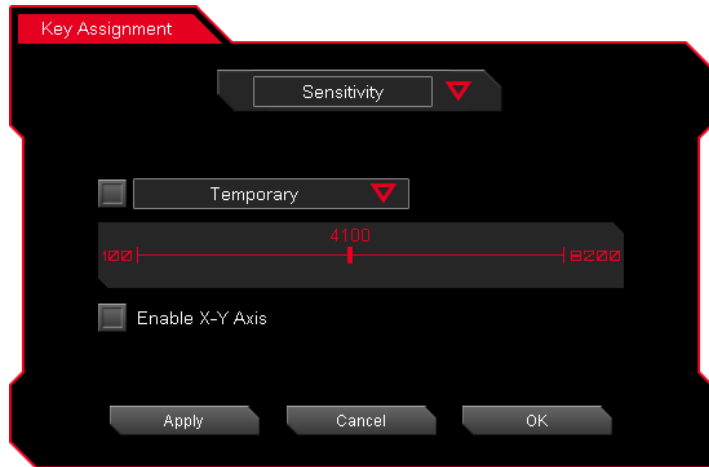

Temporary DPI

Drag the RED point on the line to adjust DPI.



Enable X-Y Axis


Setting X (Horizontal movement) and Y (Vertical movement) to have different DPI.



Sensitivity - Level Up / Level Down

Setting Four Levels of DPI and change DPI by clicking the button.

Note: DPI level will not be cycling back to the first level when it reaches the last DPI

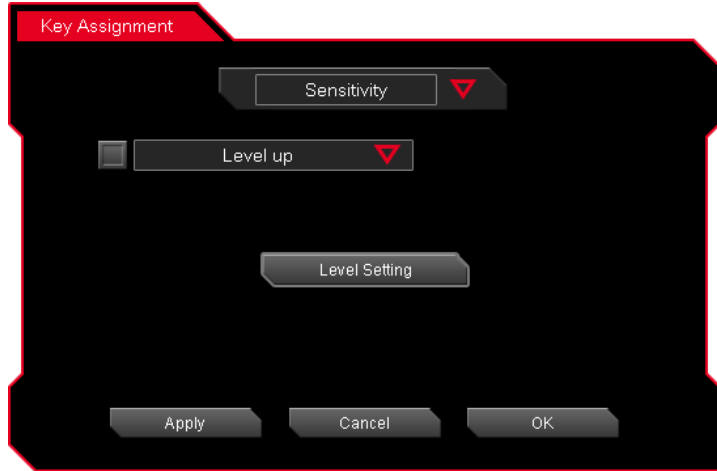

Level Up

Click the Level Setting button to set the DPI level





Level Down

Click the Level Setting button to set the DPI level

Level Setting


Click to manage DPI levels.

You can choose to enable the sensitivity for X-Y Axis too.

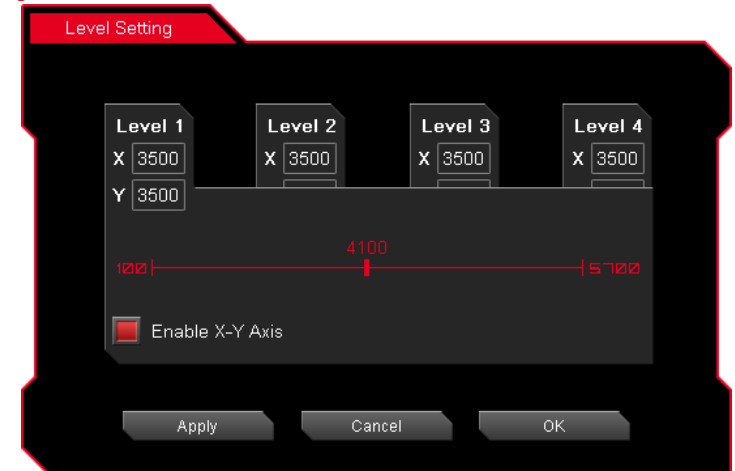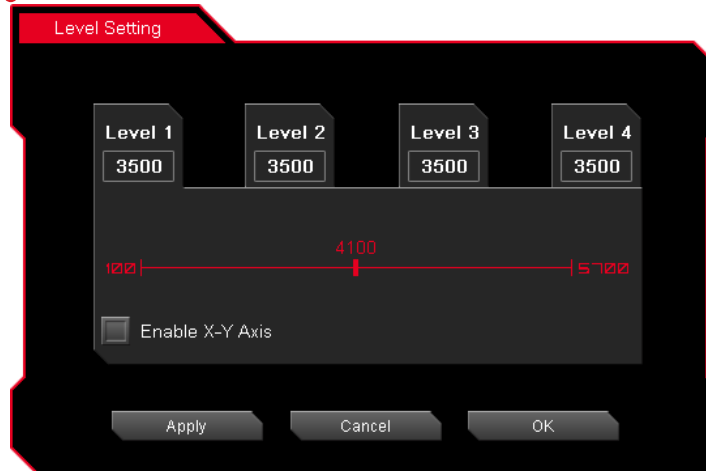


Sensitivity - On The Fly

Adjusting DPI level on the fly. You can set sensitivity by holding the assignment button and scroll up or down to adjust. So you don't need to go through GUI to change your DPI.

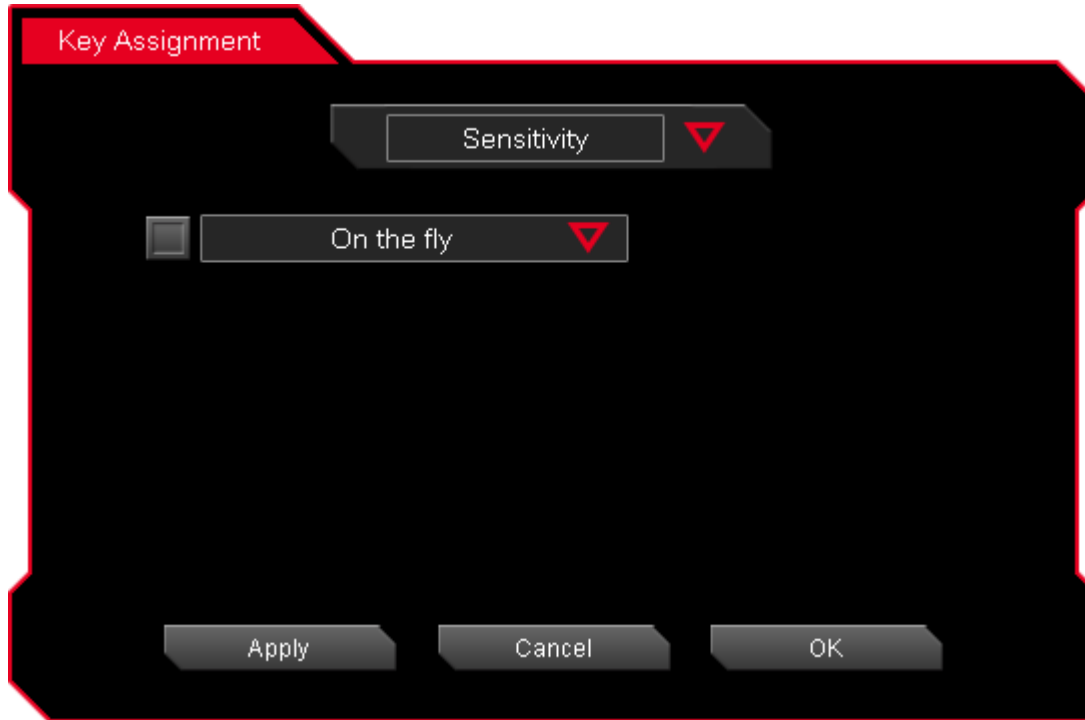



Sensitivity - Rotate

DPI level will cycle back to the first level when it reaches the highest DPI.

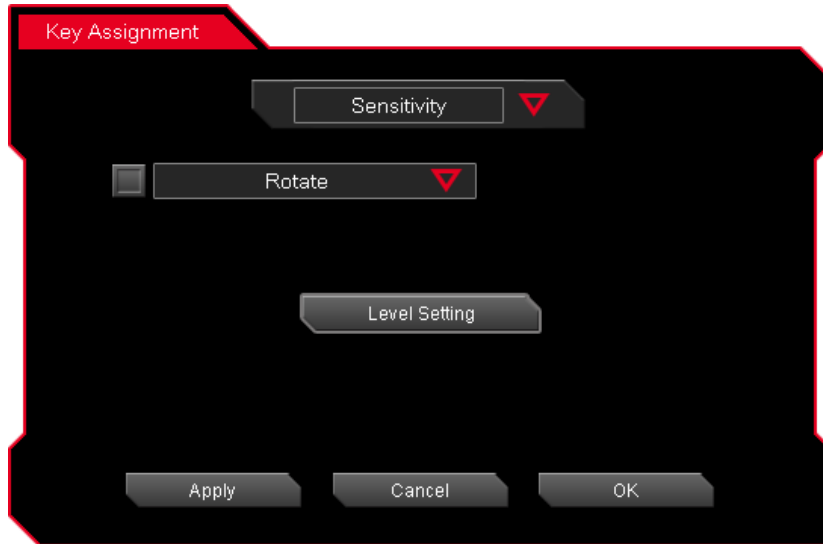


Level Setting

Click to manage DPI levels.
You can choose to enable the sensitivity for X-Y Axis too.

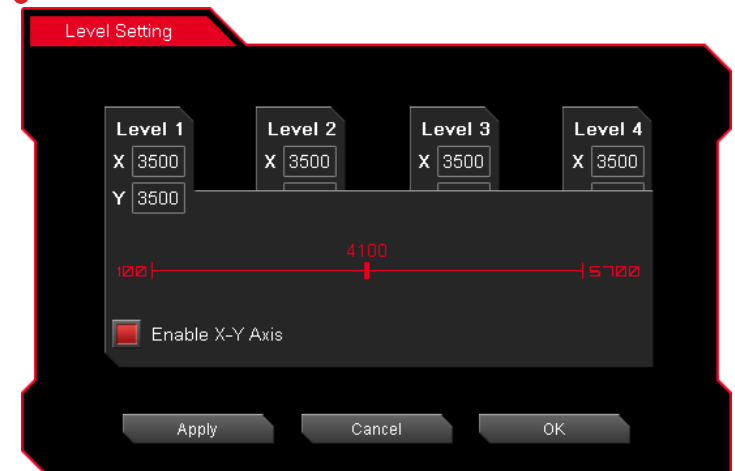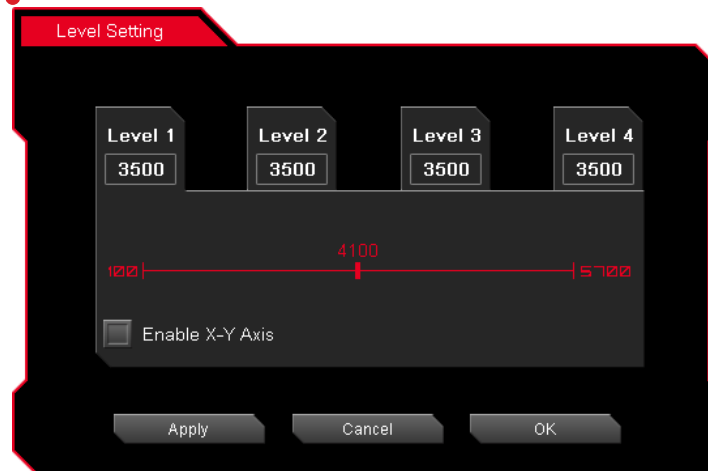

Launch Program

Pre-set a program and the program will showed up whenever you click on the button that has been programmed.

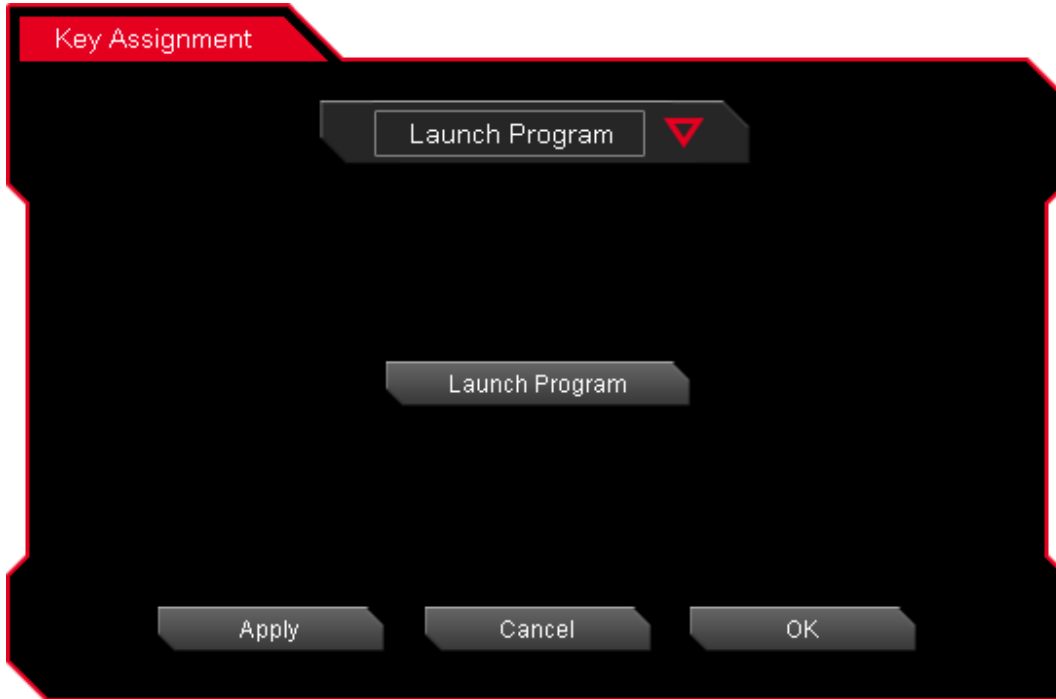


Launch Program button

Click the Launch Program button and system will pop out file manager for you to choose the program that you want to launch.

Disable

Choose “Disable” if you do not want the button have any function for particular buttons.

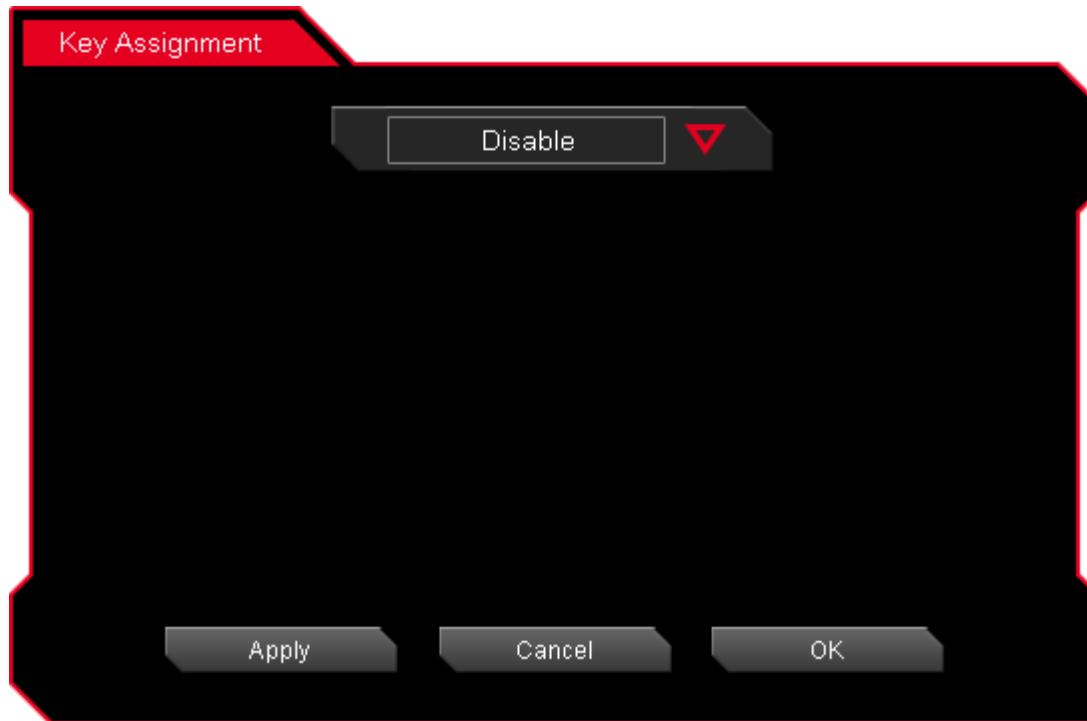

| CONTENT TWO Macro Setting



Page : 18

Macro Manager

Create / Delete / Copy / Import / Export Macro and Modifying Macro Name.

Page : 19

Macro Record Setting

3 selections for delay time

Page : 22

Insert function

Here are many function let you insert time or modify it. If you want to insert time or modify program that already set.



Page : 20

Record Macro Timeline

Record program here.

Apply / Cancel / OK


APPLY: Click Apply when Macro Setting completed

CANCEL: Click Cancel to cancel the setting

OK: Click OK after Macro Setting has been fully completed

Macro Manager

Macro manager allows you to create, delete, copy, import and export a profile.

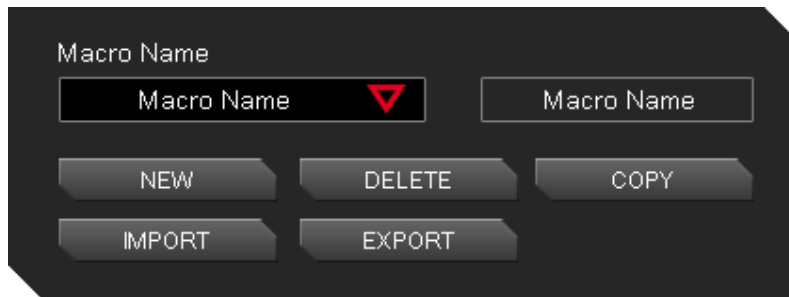

Manage Macro

NEW / DELETE / COPY / IMPORT / EXPORT macro

NEW - Create a new Macro

DELETE - Delete existing macro

COPY - Duplicate an existing macro into a new macro.

IMPORT - Import a macro that has been exported

EXPORT - Export macro into a file.


Naming Macro

You will need to click on the box to change the name for the macro



Macro Record Setting

3 selections provided for you to choose for setting the Delay Time.

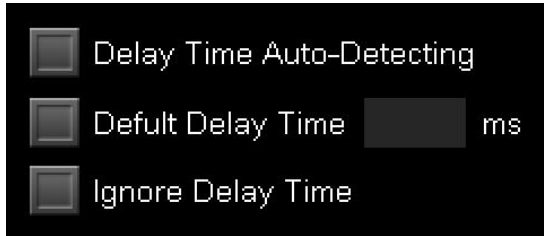

Macro Delay Time Setting

Delay Time Auto-Detecting : Delay time depend on the time you set the key at.


Default Delay Time ___ ms : Delay time depend on the preferred time set.

Ignore Delay Time : No delay time between key signal.



Macro Record Timeline

Allow you to program your macro as preferred.

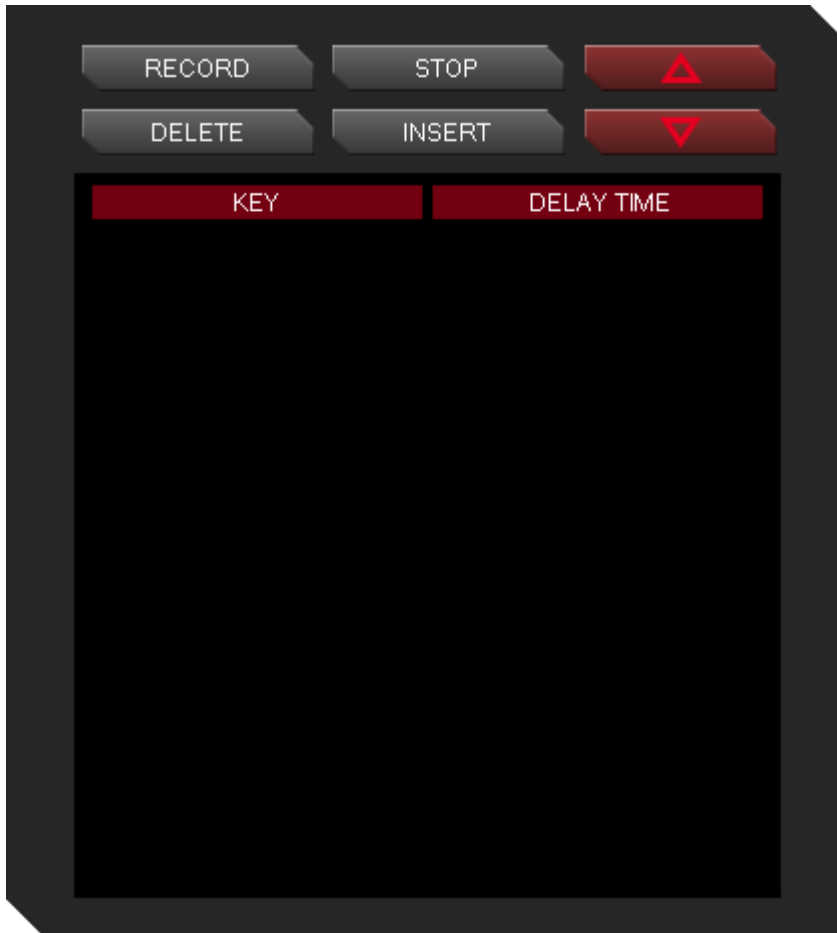

RECORD

Record program : Click Record to start recording via your keyboard or mouse and all signal will be recorded on this timeline.

DELETE

Delete signal : Choose the recorded signal that you wish to delete (Once signal has been chosen, the background will turn RED as below picture)



Click Delete and the selected signal will be removed.

STOP

Stop program : Click Stop whenever recording has been completed.

INSERT

Insert signal : Click Insert to modify/ insert signal to existing recorded signal.



Macro Record Timeline

Once Macro Name and Recording have been completed, you can proceed to programming your macro now.



Switch signal up or down

Select the signal and click Up/ Down to rearrange the recorded signals

Note : Please be careful while arranging the “Press” & “Release” signal


KEY	DELAY TIME
T	0毫秒
T	0毫秒
T	0毫秒
T	0毫秒
E	0毫秒
E	0毫秒
S	0毫秒
S	0毫秒
P	0毫秒
P	0毫秒
O	0毫秒
O	0毫秒
R	0毫秒
R	0毫秒
T	0毫秒
T	0毫秒
S	0毫秒

Choose “E” and press “UP” or “DOWN” to arrange

KEY	DELAY TIME
T	0毫秒
T	0毫秒
T	0毫秒
T	0毫秒
S	0毫秒
S	0毫秒
E	0毫秒
E	0毫秒
P	0毫秒
P	0毫秒
O	0毫秒
O	0毫秒
R	0毫秒
R	0毫秒
T	0毫秒
T	0毫秒
S	0毫秒

Insert Delay Time or Signal between Key signal

If you want to modify or insert Delay time and Key signal to the programmed macro, please click the INSERT button to modify the programmed macros.

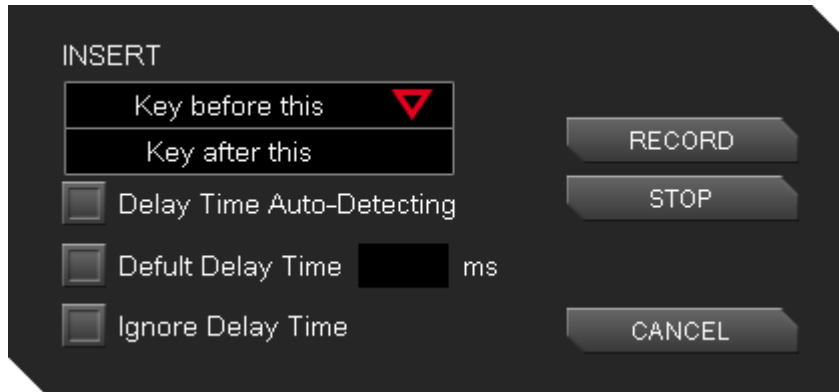

Insert Key Signal before and after

Insert key signal in macros that already programmed.

First : Choose a key that you want in Macro Timeline

Second : Click the INSERT button.

Third : Select Insert Function [Key before this] or [Key after this].

Fourth : Select Delay Time mode.

Fifth : Click RECORD button and record the macro you wanted to modify.

End : Click STOP to complete

Insert Delay Time

Insert Delay Time in macros that already programmed

First : Choose a key that you want in Macro Timeline

Second : Click the INSERT button.

Third : Select Insert Function [Delay time before this] or [Delay time after this].

Fourth : Fill in the time for [Default Delay Time __ ms] that you want to Delay.

Fifth : Click INSERT to change the delay time.

| CONTENT THREE Performance Setting



Page : 24

DPI

DPI setting

Page : 26


Lift-Off Control

Adjust the sensor distance

Page : 25

Polling Rate

Adjust Polling Rate

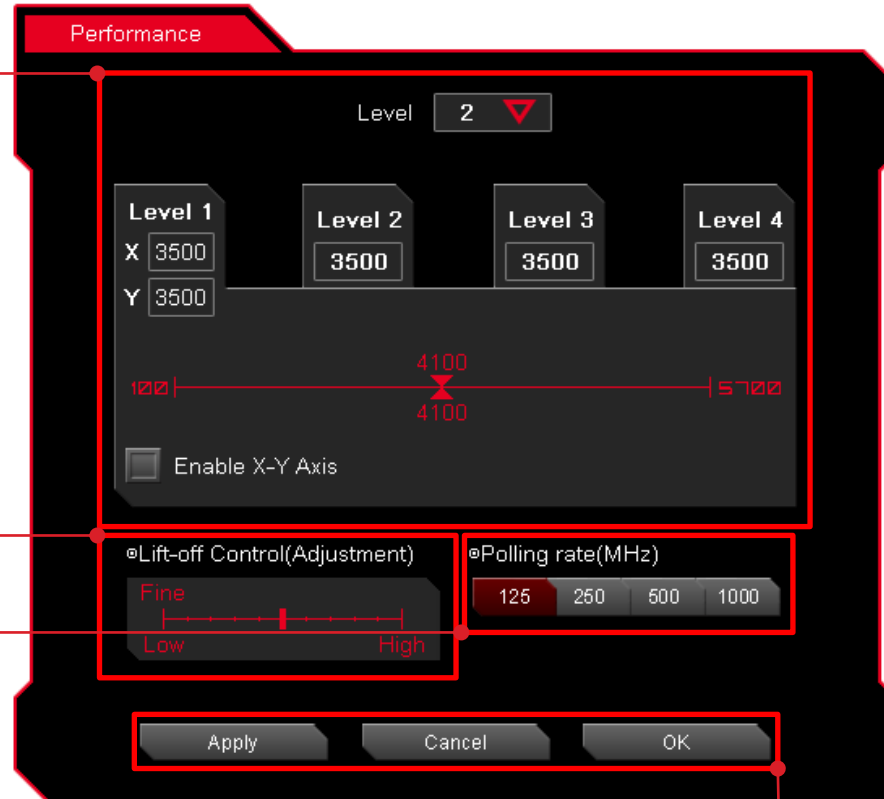

Apply / Cancel / OK

APPLY: Click Apply you completed the setting

CANCEL: Click Cancel to cancel the setting


OK: Click OK after DPI Setting has been fully completed



Dot Per Inch – The Mouse DPI

Do you know what is DPI meaning?

DPI stands for Dot Per Inch, is a measurement of how sensitive a mouse is. The higher a mouse’s DPI, the farther the cursor on your screen will move when you move the mouse. A mouse with a higher DPI setting detects and reacts to smaller movements.

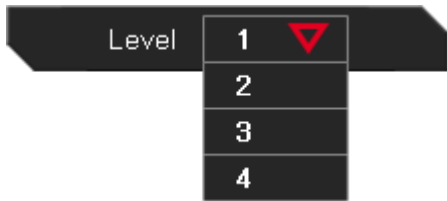


DPI levels for each Profile

You can choose how many levels of DPI you need for your Profile and you can use up to 4 DPI levels for each profiles!



Configure a DPI

Choose the DPI level by adjusting RED point to your preferred DPI level

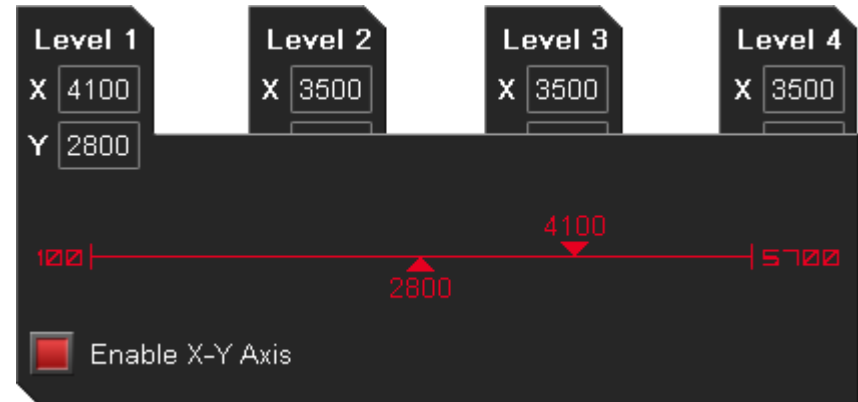

Configure a DPI for X-Y Axis

Choose the DPI level by adjusting both X & Y-Axis (Horizontal & Vertical) to your preferred DPI level. You can have different DPI level when you move for mouse horizontally and vertically by adjusting the DPI level for both X-Y Axis.

Polling Rate

A higher polling rate could decrease the lag that occurs between when you move your mouse and when the movement shows up on your screen. Higher Polling Rate does not mean that you can move fast, that will depends on what DPI level.



Adjust your VENTUS Polling Rate

There are 4 levels for Polling Rate to choose from:

125 Hz polling rate, it's reporting VENTUS's position to the computer 125 times every second (Also known as 8ms)

250 Hz polling rate, it's reporting VENTUS's position to the computer 250 times every second (Also known as 4ms)

500 Hz polling rate, it's reporting VENTUS's position to the computer 500 times every second (Also known as 2ms)

1000 Hz polling rate, it's reporting VENTUS's position to the computer 1000 times every second (Also known as 1ms)



Lift-Off Control

Lift-off trace sometimes required for particular games and some mouse-pads that will influence the trace distance and affected gameplay. Now with VENTUS, this allow gamers to adjust the distance to the best distance they want while gaming!



Adjust your VENTUS Lift-Off

Adjust the sensitivity by adjusting the level.

CAUTION : Lowest is not recommended as VENTUS might not be able to sense the mouse pad.

| CONTENT FOUR *Light Setting*



VENTUS LEFT-BUTTON HEX Light

You can select ON or OFF for HEX light.

Note: HEX Light will still flash to indicate DPI levels although Scroll Wheel light has been turned off.

VENTUS Scroll Wheel Light Option

You can select ON or OFF for Scroll Wheel light.

VENTUS Tt DRAGON LOGO Light Option

You can select ON or OFF for Tt DRAGON LOGO light.

Note: Tt DRAGON LOGO will have a pulse-break light effect.

Cancel / OK

OK: Click OK to save the setting

CANCEL: Click CANCEL to cancel the setting

| CONTENT FIVE Firmware Update



Update Your VENTUS Firmware

The New GUI can automatically detect new updates whenever there is new update available for installation.

You will just need to plug the VENTUS and launch VENTUS's GUI and system will notify you about the new update.

If you missed or closed the update, just re-plug in VENTUS and launch VENTUS GUI and system will notify you again.

